

Pipe socket [PR series] (100pcs/pack)


- Please use this by fitting electric wire on one side.
- As long as a mating part is within the adaptive male pin diameter range on the socket side, any item can be inserted / removed.
- Material Pipe part: Brass (Phosphor bronze for PR-0.2 only)
Contact part: Beryllium copper
- Finish: Gold plating over nickel base
- Insertion / removal frequency: 100 times or over
- Insertion / removal forces: 20g or over
10g or over (PR-0.2 series)



Example of usage



Part number	L (mm)	Adaptive		Rated current
		male pin diameter (φ)		
PR-0.2- 5	5	0.2 ~0.3	1A	
PR-0.2- 8	8	0.2 ~0.3		
PR-0.2-10	10	0.2 ~0.3		
PR-0.2-15	15	0.2 ~0.3		
PR-0.2-20	20	0.2 ~0.3		
PR-0.4- 5	5	0.4 ~0.5		
PR-0.4- 8	8	0.4 ~0.5		
PR-0.4-10	10	0.4 ~0.5		
PR-0.4-15	15	0.4 ~0.5		
PR-0.4-20	20	0.4 ~0.5		
PR-0.5- 5	5	0.45~0.6	3A	
PR-0.5- 8	8	0.45~0.6		
PR-0.5-10	10	0.45~0.6		
PR-0.5-15	15	0.45~0.6		
PR-0.5-20	20	0.45~0.6		
PR-0.7- 5	5	0.6 ~0.8	5A	
PR-0.7- 8	8	0.6 ~0.8		
PR-0.7-10	10	0.6 ~0.8		
PR-0.7-15	15	0.6 ~0.8		
PR-0.7-20	20	0.6 ~0.8		
PR-0.9-8	8	0.8 ~1.0	10A	
PR-0.9-10	10	0.8 ~1.0		
PR-0.9-15	15	0.8 ~1.0		
PR-0.9-20	20	0.8 ~1.0		
PR-1.2-8	8	1.0 ~1.4	15A	
PR-1.2-10	10	1.0 ~1.4		
PR-1.2-15	15	1.0 ~1.4		
PR-1.2-20	20	1.0 ~1.4		
PR-1.4-8	8	1.3 ~1.6	20A	
PR-1.4-10	10	1.3 ~1.6		
PR-1.4-15	15	1.3 ~1.6		
PR-1.4-20	20	1.3 ~1.6		
PR-1.9-8	8	1.6 ~2.0		
PR-1.9-10	10	1.6 ~2.0		
PR-1.9-15	15	1.6 ~2.0		
PR-1.9-20	20	1.6 ~2.0		

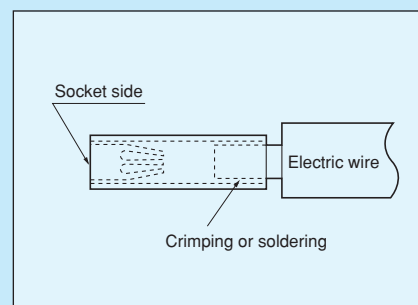

*When carrying out crimping of PR-0.2, 0.4, 0.5, 0.7 and 0.9, please use the tool OMXT-1 (please remove the fitting chip prior to use).

*When carrying out crimping of PR-1.2, 1.4 and 1.9, please use the tool OMXT-10.

Pipe socket [PR series]

Dimension

